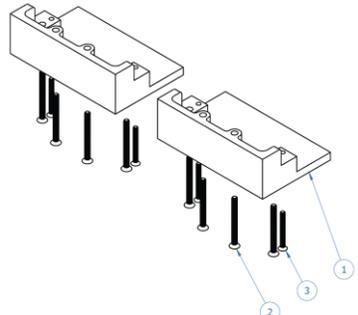


297M - Mounting Bracket for Soffit Width of 7/8" to 2-1/4"

Contents:	297M QTY:	
1. 297M Mounting Bracket	2	
2. #10-24 x 2" Flat Phillips Head Machine Screw	8	
3. #8-32 x 1-1/2" Flat Phillips Head Machine Screw	4	

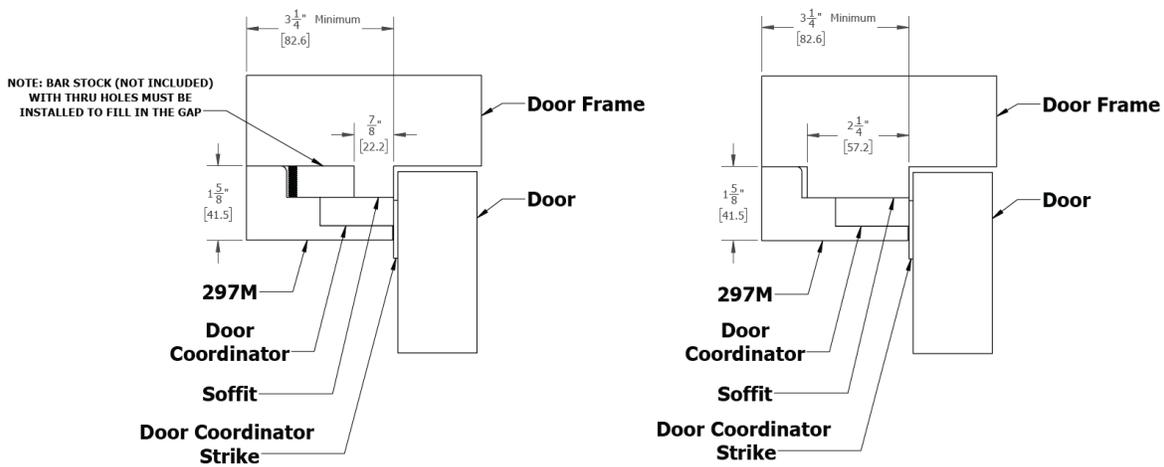


Figure 1

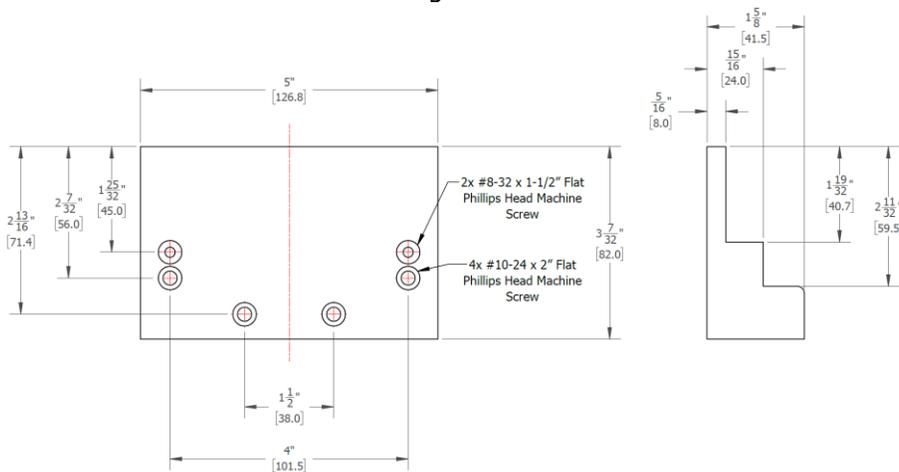
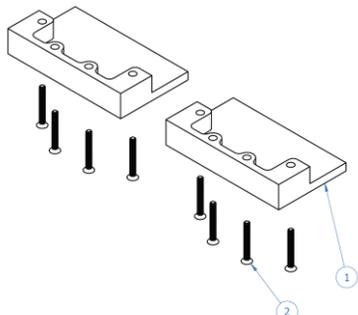


Figure 2

1. Position the 297M Mounting Brackets and mark the hole locations onto the frame
2. Drill and tap the hole locations
3. Mount the brackets with the proper combination of #10-24 x 2" Flat Phillips Head Machine Screw and #8-32 x 1-1/2" Flat Phillips Head Machine Screw
4. Install the soffit applied hardware into the brackets

297N - Mounting Bracket for Soffit Width Over 2-1/4"

Contents:	297M QTY:	
1. 297N Mounting Bracket	2	
2. #10-24 x 2" Flat Phillips Head Machine Screw	8	

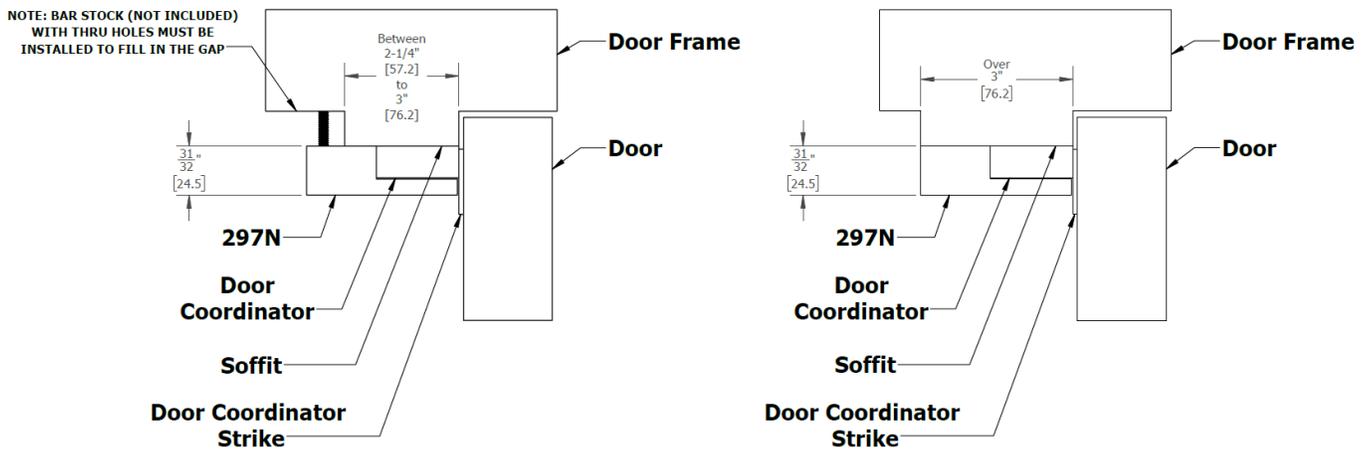


Figure 3

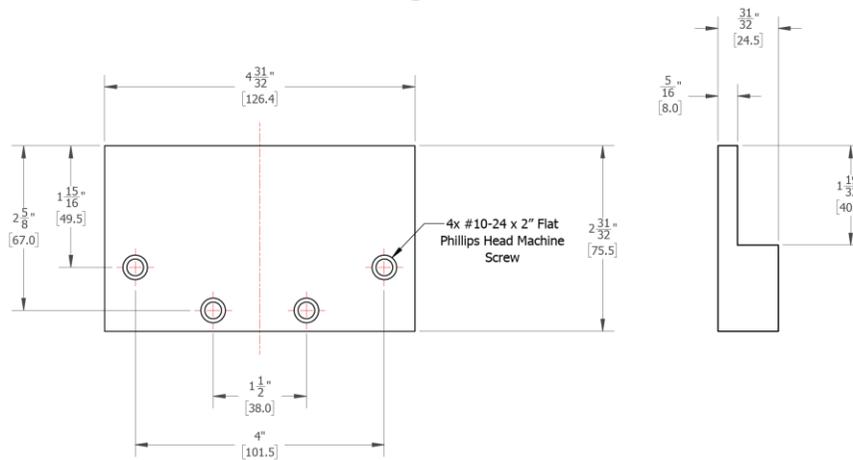


Figure 4

1. Position the 297N Mounting Brackets and mark the hole locations onto the frame
2. Drill and tap the hole locations
3. Mount the brackets with 8ea #10-24 x 2" Flat Phillips Head Machine Screw
4. Install the soffit applied hardware into the brackets