



FLOOR PREP

5800F DOUBLE ACTING FLOOR SPRING TEMPLATE
DOOR, FLOOR, & FRAME PREP

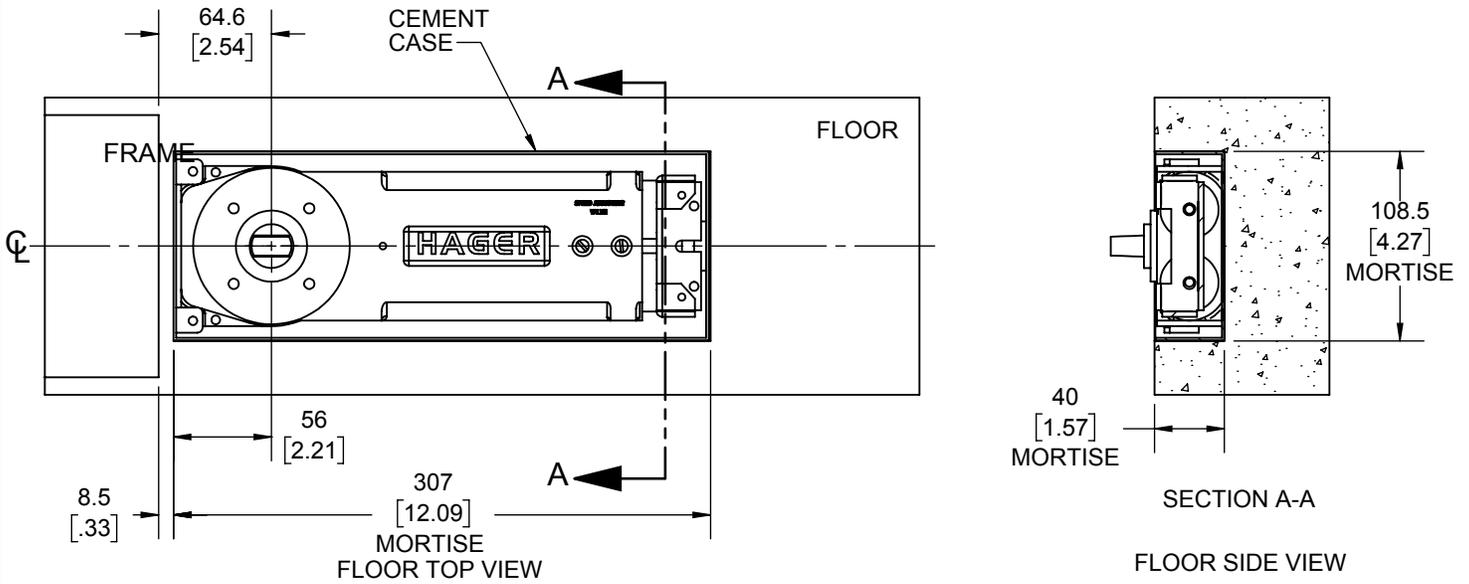

FRAME PREP

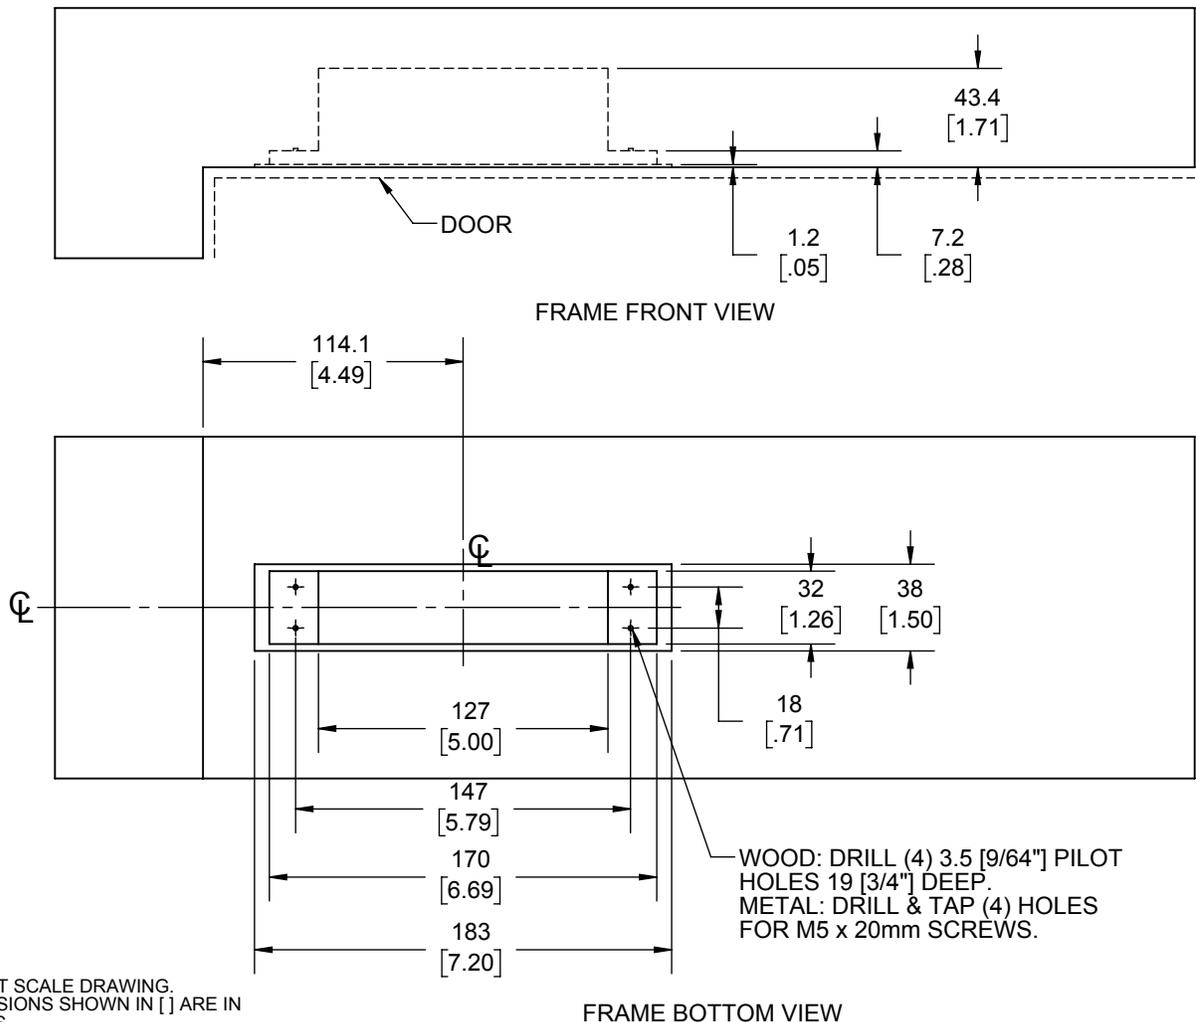

WOOD: DRILL (4) 3.5 [9/64"] PILOT HOLES 19 [3/4"] DEEP.
 METAL: DRILL & TAP (4) HOLES FOR M5 x 20mm SCREWS.


- NOTE 1: DO NOT SCALE DRAWING.
- NOTE 2: DIMENSIONS SHOWN IN [] ARE IN INCHES.
- NOTE 3: TOP OF CEMENT CASE MUST BE FLUSH WITH FINISHED FLOOR LINE.
- NOTE 4: CEMENT CASE MUST BE LEVEL AND PARALLEL TO FRAME.
- NOTE 5: ALL PIVOT REINFORCEMENTS FOR METAL DOORS ARE SUPPLIED BY OTHERS.




5800F DOUBLE ACTING FLOOR SPRING TEMPLATE

DOOR, FLOOR, & FRAME PREP

DOOR PREP: TOP EDGE

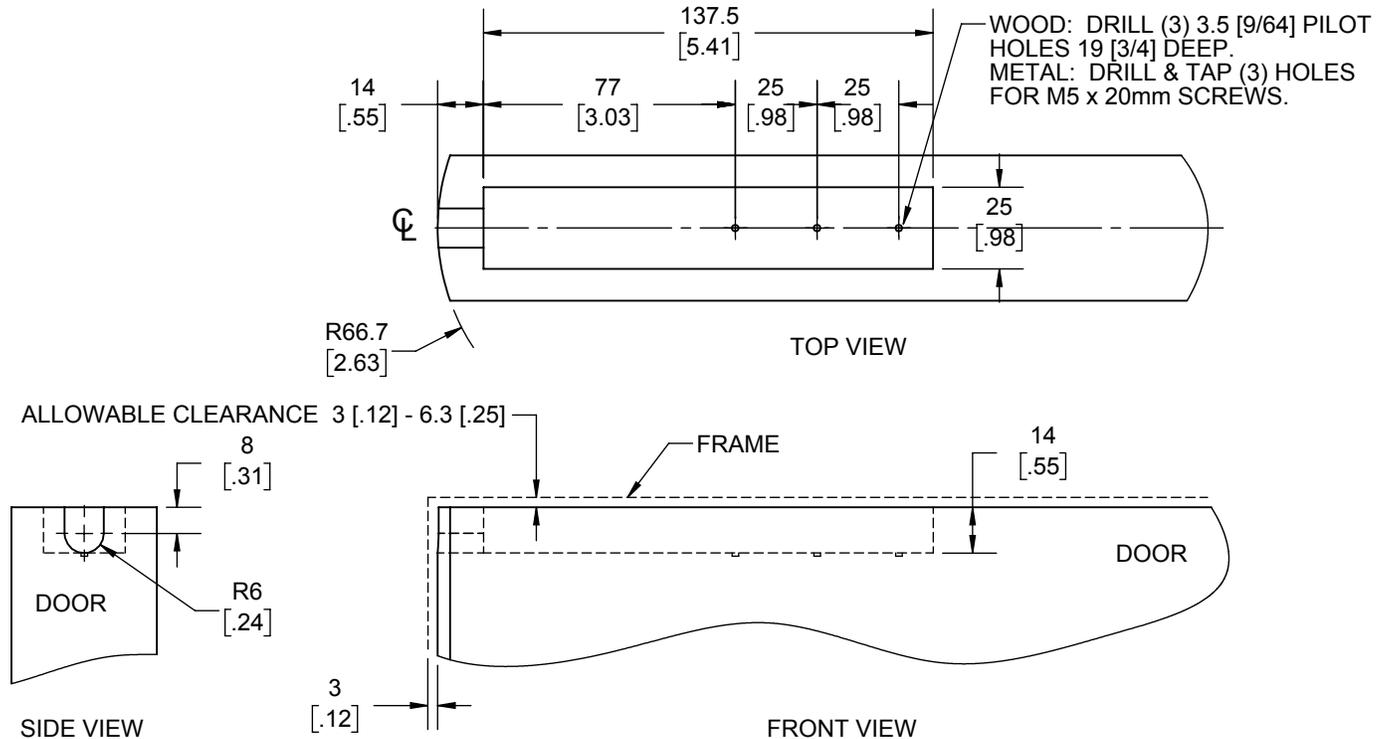

DOOR PREP: BOTTOM EDGE

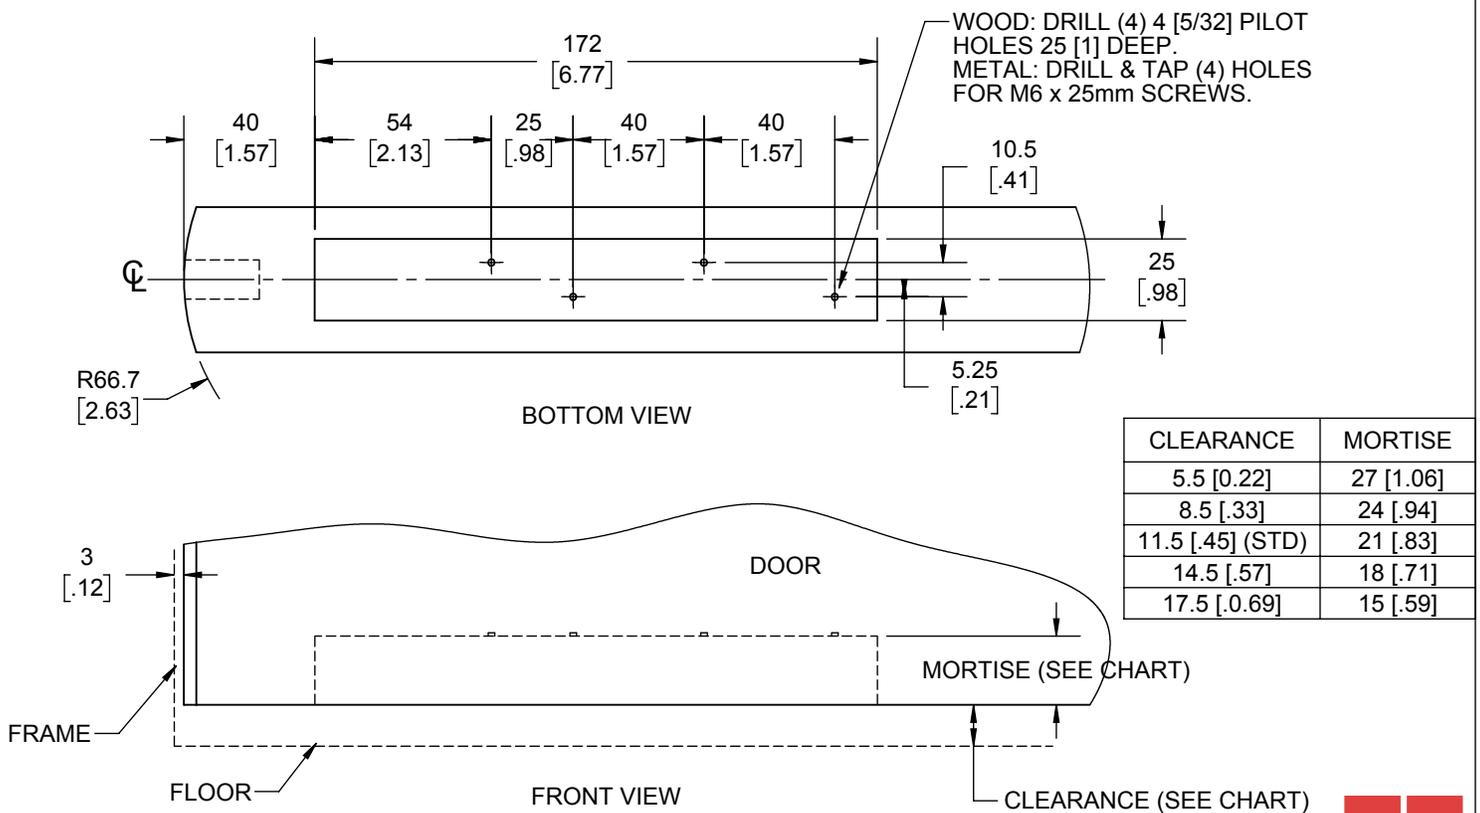

NOTE 1: DO NOT SCALE DRAWING.
 NOTE 2: DIMENSIONS SHOWN IN [] ARE IN INCHES.
 NOTE 3: ALL PIVOT REINFORCEMENTS FOR METAL DOORS ARE SUPPLIED BY OTHERS.

